



11SOV 19SOV

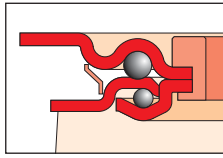

- From the **Pressed steel castors** range
- Double ball race swivel head
- Top plate or bolt hole fixing




11SOV + Blue rubber tyred wheel with nylon centre - plate fixing

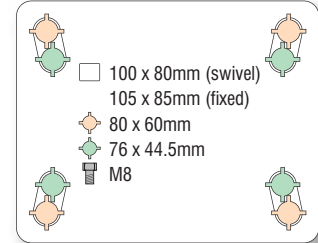

wheel diameter	tread width	fitted height	swivel offset	load capacity	bearing type	fixing		
						swivel	fixed	swivel + total stop brake
100	32	128	32	150	ball	411SOV RNBJ	419SOV RNBJ	411SOV RNBJ SWB
125	35	152	47.5	150	ball	511SOV RNBJ	519SOV RNBJ	511SOV RNBJ SWB

11SOV + Blue rubber tyred wheel with nylon centre - bolt hole fixing

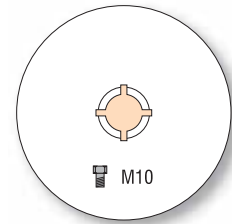

wheel diameter	tread width	fitted height	swivel offset	load capacity	bearing type	fixing		
						swivel	fixed	swivel + total stop brake
100	32	128	32	150	ball	411SOV RNBJ BH10		411SOV RNBJ BH10 SWB
125	35	152	47.5	150	ball	511SOV RNBJ BH10		511SOV RNBJ BH10 SWB



EXPANDING ADAPTOR for round or square tubing
To suit all bolt hole fixing castors. See page 13

NOTE: All dimensions are in mm and all loadings in kg unless otherwise stated



- From the **Pressed steel castors** range
- Suitable for use with V30B, 11SOV and V40A series castors with bolt hole fixing

EXC

Round expander sets



expansion range: min/max	for castors with 10mm bolt hole	for castors with 12mm bolt hole
19 - 22	EXC10 R1922	EXC12 R1922
22 - 25	EXC10 R2225	EXC12 R2225
27 - 30	EXC10 R2730	EXC12 R2730

A ring spanner may be required to access head of bolt when tightening

Square expander sets



expansion range: min/max	for castors with 10mm bolt hole	for castors with 12mm bolt hole
19 - 22	EXC10 S1922	EXC12 S1922
22 - 25	EXC10 S2225	EXC12 S2225
27 - 30	EXC10 S2730	EXC12 S2730

A ring spanner may be required to access head of bolt when tightening

NOTE: All dimensions are in mm and all loadings in kg unless otherwise stated