


# TS2/TF2 series



- Top plate fixing.
- Ball bearing swivel head.
- Matching swivel and fixed castors.

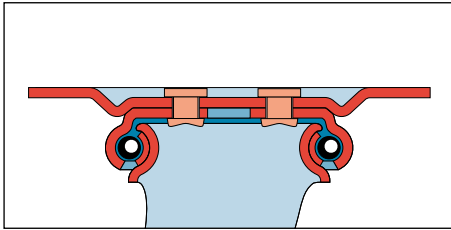

whl dia	fitted height	swivel radius	tread width	wheel		load capacity	plain bore wheel		
				centre	tyre		swivel	fixed	rep wheel
50	76	53	20	polypropylene	cushion rubber	35	TS2 050 RL02	TF2 050 RL02	050 RL02
			20	nylon		55	TS2 050 NY02	TF2 050 NY02	050 NY02
75	98	65	20	polypropylene	cushion rubber	36	TS2 075 RL02	TF2 075 RL02	075 RL02
			20	nylon		75	TS2 075 NY02	TF2 075 NY02	075 NY02
100	123	78	20	polypropylene	cushion rubber	41	TS2 100 RL02	TF2 100 RL02	100 RL02
			20	nylon		75	TS2 100 NY02	TF2 100 NY02	100 NY02

1.2 Pressed Steel Castors



## Standard fixings

■ = 89 x 59mm  
● = 73 x 38mm  
● = 55 x 40mm  
⊥ = M6

TS2  
TF2

## Adaptions

**1 Wheel brake**  
Swivel castors only  
Foot operated wheel brake  
Add suffix 'B' to castor code

**2 Threadguards**  
Swivel & fixed, most wheels  
Prevent thread from binding wheel  
Add suffix 'T' to castor code

**3 Alternative T17 top plate**  
Add 'T17' to castor code

TS2 T17

■ = 73 x 73mm  
● = 50-57mm x 50-57mm  
⊥ = M6

Threadguards can be fitted in conjunction with most other adaptations



# BS2/BF2 series




BS2 050 NY02



BF2 050 RL02


- Single hole fixing.
- Ball bearing swivel head.
- Matching swivel and fixed castors.

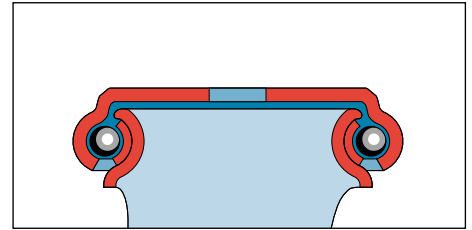

whl dia	fitted height	swivel radius	tread width	wheel		load capacity	plain bore wheel		
				centre	tyre		swivel	fixed	rep wheel
50	74	53	20	polypropylene	cushion rubber	35	BS2 050 RL02	BF2 050 RL02	050 RL02
			20	nylon		55	BS2 050 NY02	BF2 050 NY02	050 NY02
75	96	65	20	polypropylene	cushion rubber	36	BS2 075 RL02	BF2 075 RL02	075 RL02
			20	nylon		75	BS2 075 NY02	BF2 075 NY02	075 NY02
100	121	78	20	polypropylene	cushion rubber	41	BS2 100 RL02	BF2 100 RL02	100 RL02
			20	nylon		75	BS2 100 NY02	BF2 100 NY02	100 NY02




## Standard fixings

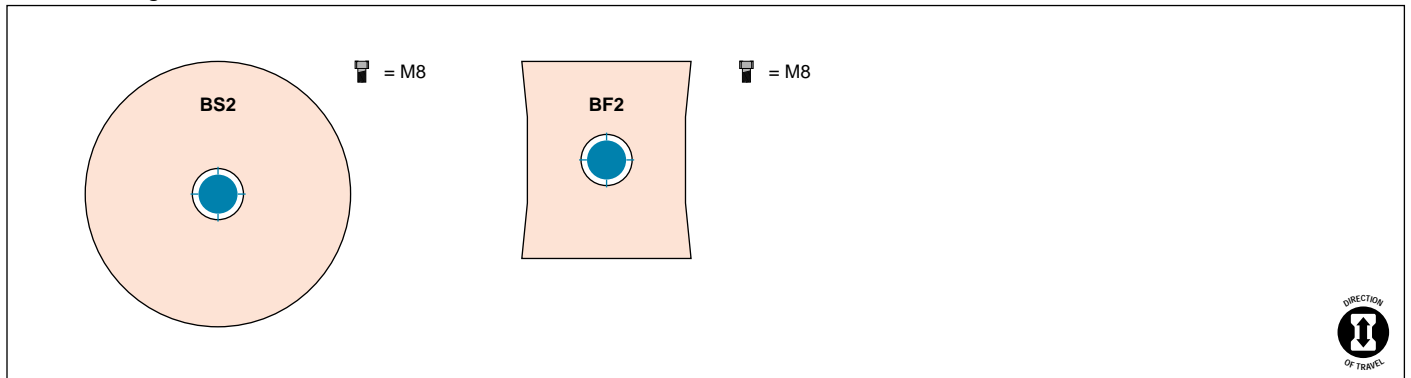

## Adaptions



**1 Wheel brake**  
Swivel castors only  
Foot operated wheel brake  
Add suffix 'B' to castor code

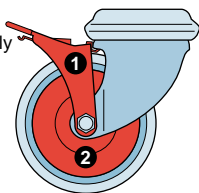

**2 Threadguards**  
Swivel & fixed, most wheels  
Prevent thread from binding wheel  
Add suffix 'T' to castor code  
**Threadguards** can be fitted in conjunction with most other adaptions

**3 Expanding plug**  
Round (plastic) or Square (steel)  
(see table for castor code suffix)

**4 Sprung plug for mobile steps**  
(see table for castor code suffix)

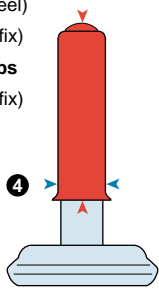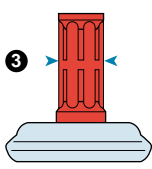

3 tube shape	effective range	code suffix
○	18.1 - 21.4	R18
○	21.1 - 24.4	R21
□	21.3 - 23.5	S21

4 tube shape	spring rating	code suffix		
○	25.4 (1")	78	15	SA1
○	25.4 (1")	78	30	SA2



Head Office & Warehouse  
Altrincham  
Tel: 0161 928 9617  
Fax: 0161 928 7824

South Coast Office & Warehouse  
Bournemouth  
Tel: 01202 579915  
Fax: 01202 581902

Southern Office & Warehouse  
Watford  
Tel: 01923 249334  
Fax: 01923 245513

Midlands Office & Warehouse  
Burton upon Trent  
Tel: 01283 845444  
Fax: 01283 845666

Scottish Office & Warehouse  
Bellshill  
Tel: 01698 747005  
Fax: 01698 747676