


TS5/TF5 series




- Top plate fixing.
- Ball bearing swivel head.
- Matching swivel and fixed castors.

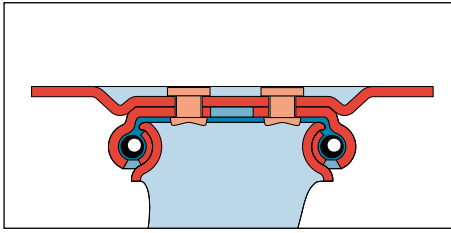

whl dia	fitted height	swivel radius	tread width	wheel		load capacity	plain bore wheel			roller bearing wheel			ball bearing wheel				
				centre	tyre		swivel	fixed	rep whl	swivel	fixed	rep whl	swivel	fixed	rep whl		
150	203	129	40	nylon		500	TS5 150 NY05	TF5 150 NY05	150 NY05	TS5 150 NY15	TF5 150 NY15	150 NY15					
			50	nylon		800								TS5 150 NY2H	TF5 150 NY2H	150 NY2H	
			45	nylon	polyurethane	300	TS5 150 NTOE	TF5 150 NTOE	150 NTOE					TS5 150 NT25	TF5 150 NT25	150 NT25	
			45	cast iron		910	TS5 150 CI05	TF5 150 CI05	150 CI05	TS5 150 CI15	TF5 150 CI15	150 CI15					
			45	cast iron	rubber	370	TS5 150 RU05	TF5 150 RU05	150 RU05	TS5 150 RU15	TF5 150 RU15	150 RU15					
			38	cast iron	polyurethane	730	TS5 150 PT05	TF5 150 PT05	150 PT05	TS5 150 PT15	TF5 150 PT15	150 PT15					
			42	aluminium	rubber	300									TS5 160 GR2H	TF5 160 GR2H	160 GR2H
160	208	134	50	nylon		500	TS5 200 NY05	TF5 200 NY05	200 NY05	TS5 200 NY15	TF5 200 NY15	200 NY15					
			50	nylon		1000								TS5 200 NY2H	TF5 200 NY2H	200 NY2H	
			50	nylon	polyurethane	400	TS5 200 NTOE	TF5 200 NTOE	200 NTOE					TS5 200 NT2H	TF5 200 NT2H	200 NT2H	
			45	cast iron		1000	TS5 200 CI05	TF5 200 CI05	200 CI05	TS5 200 CI15	TF5 200 CI15	200 CI15					
			50	cast iron	rubber	535	TS5 200 RU05	TF5 200 RU05	200 RU05	TS5 200 RU15	TF5 200 RU15	200 RU15					
			42	aluminium	rubber	400									TS5 200 GR2H	TF5 200 GR2H	200 GR2H
			45	cast iron	polyurethane	1000	TS5 200 PT05	TF5 200 PT05	200 PT05	TS5 200 PT15	TF5 200 PT15	200 PT15					



Standard fixings

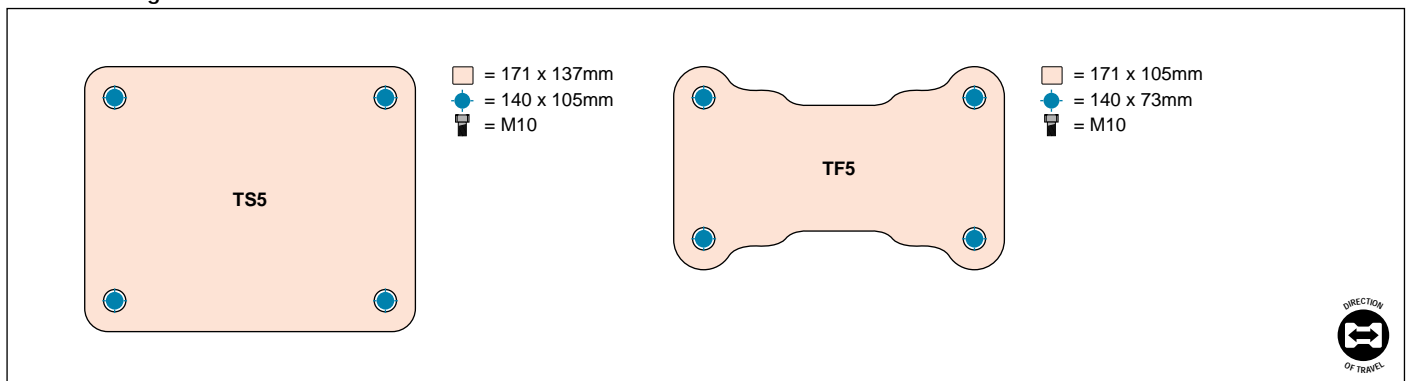

Adaptions

1 Wheel lock
Swivel castors only (except 160mm)
Simple thumbscrew wheel brake
Add suffix 'W' to castor code

2 Wheel brake
Swivel castors only (except CI, 160mm GR)
Foot operated wheel brake
Add suffix 'H' to castor code

4 Head seal
Swivel only
Prevents ingress of dirt and dust
Add suffix 'S' to castor code

3 Swivel & wheel brake
Swivel castors only (except CI, 160mm GR)
As above with simultaneous brake to swivel
Add suffix 'L' to castor code

5 Threadguards
Swivel & fixed, most wheels
Prevent thread from binding wheel
Add suffix 'T' to castor code

Head seals and Threadguards can be fitted in conjunction with most other adaptions



BS5
series




BS5 150 NT0E



BS5 150 NY15

- Single hole fixing.
- Ball bearing swivel head.

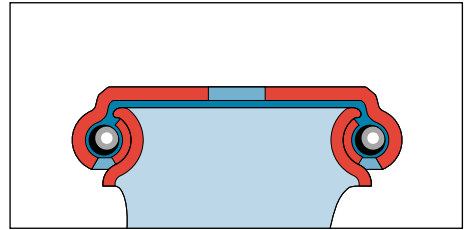

whl dia	fitted height	swivel radius	tread width	wheel		load capacity	plain bore wheel			roller bearing wheel			ball bearing wheel		
				centre	tyre		swivel	fixed	rep whl	swivel	fixed	rep whl	swivel	fixed	rep whl
150	200	129	40	nylon		500	BS5 150 NY05		150 NY05	BS5 150 NY15		150 NY15			
			50	nylon		600							BS5 150 NY2H		150 NY2H
			45	nylon	polyurethane	300	BS5 150 NT0E		150 NT0E				BS5 150 NT25		150 NT25
			45	cast iron		600	BS5 150 CI05		150 CI05	BS5 150 CI15		150 CI15			
			45	cast iron	rubber	370	BS5 150 RU05		150 RU05	BS5 150 RU15		150 RU15			
			38	cast iron	polyurethane	600	BS5 150 PT05		150 PT05	BS5 150 PT15		150 PT15			
160	205	134	42	aluminium	rubber	300						BS5 160 GR2H		160 GR2H	
200	244	154	50	nylon		500	BS5 200 NY05		200 NY05	BS5 200 NY15		200 NY15			
			50	nylon		600							BS5 200 NY2H		200 NY2H
			50	nylon	polyurethane	400	BS5 200 NT0E		200 NT0E				BS5 200 NT2H		200 NT2H
			45	cast iron		600	BS5 200 CI05		200 CI05	BS5 200 CI15		200 CI15			
			50	cast iron	rubber	535	BS5 200 RU05		200 RU05	BS5 200 RU15		200 RU15			
			42	aluminium	rubber	400								BS5 200 GR2H	
			45	cast iron	polyurethane	600	BS5 200 PT05		200 PT05	BS5 200 PT15		200 PT15			

Standard fixings



Adaptions

1 Wheel lock
Not available on 160mm
Simple thumbscrew wheel brake
Add suffix 'W' to castor code

2 Wheel brake
Not available on CI, 160mm GR
Foot operated wheel brake
Add suffix 'H' to castor code

3 Swivel & wheel brake
Not available on CI, 160mm GR
As above with simultaneous brake to swivel
Add suffix 'L' to castor code

4 Head seal
Prevents ingress of dirt and dust
Add suffix 'S' to castor code

5 Threadguards
Most wheels
Prevent thread from binding wheel
Add suffix 'T' to castor code

Head seals and Threadguards can be fitted in conjunction with most other adaptations



Head Office & Warehouse
Altrincham
Tel: 0161 928 9617
Fax: 0161 928 7824

South Coast Office & Warehouse
Bournemouth
Tel: 01202 579915
Fax: 01202 581902

Southern Office & Warehouse
Watford
Tel: 01923 249334
Fax: 01923 245513

Midlands Office & Warehouse
Burton upon Trent
Tel: 01283 845444
Fax: 01283 845666

Scottish Office & Warehouse
Bellshill
Tel: 01698 747005
Fax: 01698 747676